

NOVA U UKULELE

MANUAL

ITEMS IN BOX

Nova U Ukulele
Case
Spare String Set
Ukulele Strap
Capo
Charging Cable (TA Model Only)
Output Cable (TA Model Only)
Warranty Card

CONTENTS

*	3	SPECIFICATIONS
*	4	HOW TO CHANGE STRINGS
*	8	ACOUSTIC PLUS SYSTEM
*	10	WARRANTY
*	11	RETURN POLICY
*	12	THANK YOU



Specifications

Model	Nova U
Size	Concert 23"
Body Thickness	2 Inch
Weight	1.25 LBS
Top	Carbon Fiber Composite Polycarbonate
Back & Sides	Carbon Fiber Composite Polycarbonate
Neck	Carbon Fiber Composite Polycarbonate
Fretboard	Carbon Fiber Composite Polycarbonate
Finish	Satin
Tuning Pegs	Open Gold Classic
Nut & Saddle	Carbon Fiber Composite Polycarbonate
Nut Width	1-7/16"
Strings	Enya Carbon
Pickup	DOUBLE® Acoustic Plus (Optional)

 
GUIDE

HOW TO CHANGE STRINGS

STEP 1


Loose the string by turning the tuning peg clockwise.

Note: When face the tuner peg directly, turn clockwise turn to loose; turn counter-clockwise to tighten

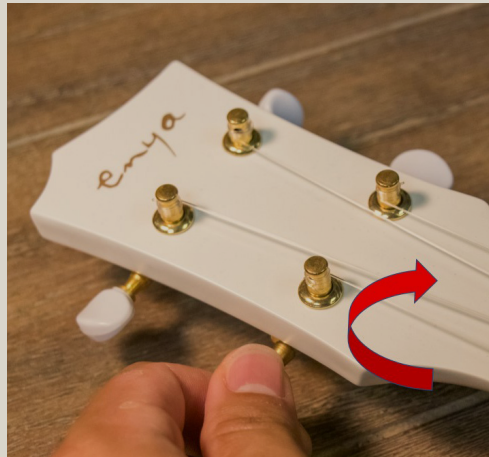

STEP 2

 Remove the string by taking the end knot out of the slot.

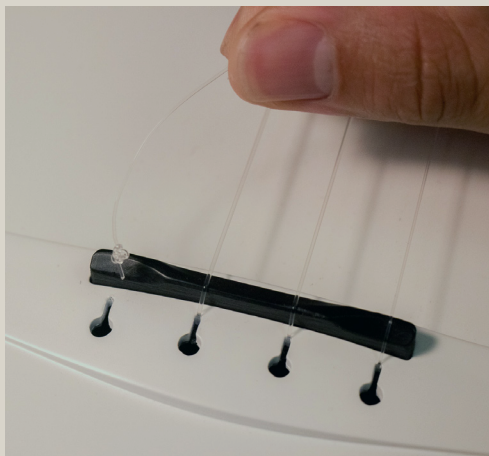



STEP 3

Get the new strings ready.



 
STEP 4

Make a knot at the end of string, the knot should be strong and big enough to not slip through the bridge.



STEP 5

Insert the string knot into the slot on bridge.

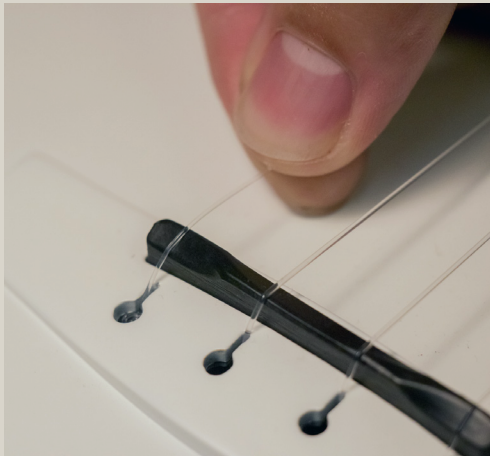

STEP 6

Insert the string knot into the slot on bridge.



STEP 7

Wind the string by turning the tuning peg counterclockwise.

Note: Avoid tighten the string excessively, use a tuner while tuning.



ACOUSTIC PLUS SYSTEM

INSTRUCTIONS

Please follow the instructions to explore the Acoustic Plus features if you have purchased the Nova U Acoustic Plus model.

HOW IT WORK

knob 1

Press and hold to turn on the Acoustic Plus system, quick press to turn off.
Turn to control volume.

knob 2

Turn to control Reverb effect.

knob 3

Turn to control Chorus effect.

1
2
3

 


The Acoustic Plus uses as a regular acoustic-electric system as well. The output jack locates on the bottom of the ukulele body.

CHARGING

INSTRUCTIONS

Please locate the micro USB charging port on the bottom of the ukulele body. Use a regular USB power source to charge the ukulele. Charging light turns into green from red once the battery is fully charged. The battery takes 2 hours to charge to full and provides a use time up to 4 hours.

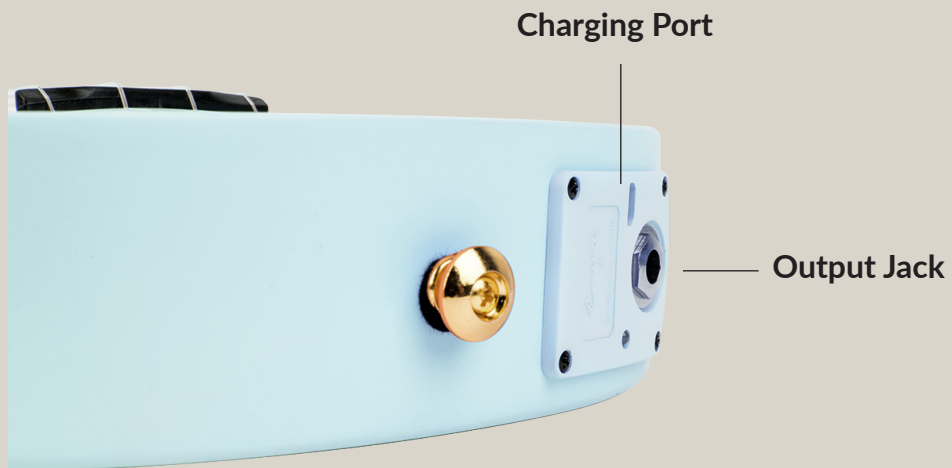

WARRANTY

YOUR ENYA INSTRUMENT IS WARRANTED AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP BY ENYA MUSIC, INC. FOR A PERIOD OF ONE YEAR STARTING FROM THE DATE OF ORIGINAL PURCHASE FROM AN AUTHORIZED DEALER. IF A DEFECT EXISTS, ENYA MUSIC, INC., AT ITS OPTION WILL EITHER (1) REPAIR THE PRODUCT AT NO CHARGE USING NEW OR REFURBISHED PARTS, (2) EXCHANGE THE PRODUCT WITH A FUNCTIONAL EQUIVALENT PRODUCT THAT IS NEW OR REFURBISHED, OR (3) REFUND THE ORIGINAL PURCHASE PRICE.

THE FOLLOWING ITEMS ARE NOT COVERED BY THIS WARRANTY

- Any instrument on which any part has been disassembled.
- Any instrument that has been damaged due to an accident, negligence or misuse.
- Normal “wear and tear”, including but not limited to any discoloration, fading or damage to the original finish, or worn frets, strings, tuners, hardware and plating.
- Any instrument not purchased from an authorized dealer, or upon which unauthorized repair or service work has been carried out.
- Any instrument not purchased from an authorized dealer, or upon which unauthorized repair or service work has been carried out.

RETURN POLICY

YOU HAVE 30 CALENDAR DAYS TO RETURN AN ITEM FROM THE DATE YOU HAVE RECEIVED IT; VERIFIED BY TRACKING INFORMATION. IF 30 CALENDAR DAYS ELAPSE FROM THE TIME OF PURCHASE, NO REFUND OR EXCHANGE IS AVAILABLE.

To be eligible for a return, your item must be unused and in the same condition that you received it. The product must be in the original packaging, including all the accessories included in the initial product shipment.

Sale items cannot be refunded.

You must obtain RMA Number and return address from us before shipping any product back to Enya Music, Inc.

Please email support@enya-music.com to obtain an RMA (Returned Merchandise Authorization). For an RMA to be issued, proof of purchase is necessary. Shipping information and refund information will be notified after the refund is granted. There are certain situations where only partial refunds are granted: (if applicable) Any item not in its original condition, is damaged or missing parts for reasons not due to our error.

Disclaimers: ENYA MUSIC, INC. ASSUMES NO LIABILITY FOR ANY INCIDENTAL AND CONSEQUENTIAL DAMAGE.

Any recovery is limited to the original purchase price. No other person is authorized to modify this limited warranty. This warranty gives you specific legal rights, and you may have other rights that vary by state and jurisdiction. These rights shall not be affected by this limited warranty. This warranty cannot be transferred or assigned.

To obtain warranty service, contact Enya Music, Inc. at support@enya-music.com,

Using the information provided at www.enya-music.com.

Proof of purchase is required to verify eligibility.

© 2019 Enya Music, Inc. All Rights Reserved.

Enya Music, Inc.
6132 Westline Dr
Houston, TX 77036 USA

**THANK YOU FOR CHOSING
ENYA INSTRUMENT.**

FOR THE MUSIC OF LOVE

If you have any questions, please feel free to contact us.

service@enya-music.com



ENYA MUSIC USA

6132 Westline Dr

Houston, TX 77036

Email: service@enya-music.com